



wedi Product Guide

wedi 610 adhesive sealant

Adhesive sealant is needed when joining wedi boards, bases and accessories as well as to cover our fasteners. If you see blue, you glue!

- 1 x 600ml Sausage per 3 m²
- ½ x 600ml Sausage per 1.5 m²

wedi Corner Putty Knife

Used to correctly remove excess adhesive sealant and ensure neat, smooth finish on internal joints. A must have when installing!

wedi Fasteners

Fasteners are placed one for every 300 mm of framing and one extra fastener in every board seam and transition to another wedi board.

Walls: Always necessary when fixing to wall studs.

Floors: Fasteners are only necessary when installing boards on a timber substrate.

Note: Shower Base will never be screwed down and just glued with the appropriate Tile Adhesive


Tile adhesive

Depending on your substrate, you will require a different tile adhesive.

- Cement/Concrete Substrates: C2S1, or C2S2
- Wooden Substrates: C2S2


wedi calculations	
wedi 610	1 x 600 ml Sausage per 10 mm board (3 m ²)
	½ x 600 ml Sausage per 6 mm board (1.35 m ²)
	1 x 600 ml Sausage per Shower Base
wedi Fastener	25 fasteners per 10 mm board (3 m ²)
	15 fasteners per 6 mm board (1.35 m ²)

Note: The calculation might vary due to different timber stud spacing. This calculation serves as a guideline that often already allows a 10% buffer so that the installer doesn't run short of products on the jobsite.

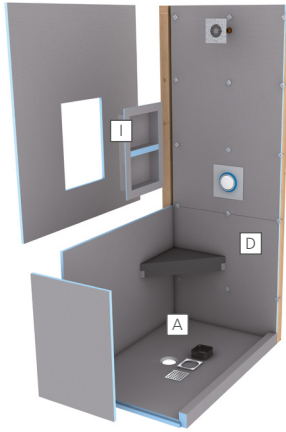


wedi Fundo Primo Shower System – 1200 mm × 1000 mm			2.4m walls
Description	Part Number	Quantity	
A wedi Fundo Primo, 1220 mm × 1020 mm × 40 mm, Center Drain	073736221	1 pc	
B wedi Fundo Primo and Ligno Drain Kit	US1000040	1 pc	
C wedi Fundo Drain Cover Set, Brushed Stainless Steel	US1000031	1 pc	
D wedi Building Board, 2500 × 1200 × 10 mm	010729410	2 pcs	
E wedi Fastener Kit	607023513	1 pc	
F wedi 610 Adhesive Sealant, 600 ml, 1 Sausage	076902007	3 pcs	
G wedi Tools sealing gaiter, 130 × 130 mm, pipe diameters 10 – 24 mm	095110376	1 pc	
H wedi Tools sealing gaiter, 200 × 200 mm, pipe diameters 50 – 75 mm	095110377	1 pc	
I wedi Niche 90, rectangular	074315440	1 pc	
J wedi Tools, Corner Putty Knife	US5000044	1 pc	

Materials calculated for shower walls 2.4m tall. Estimates not guaranteed and must be field verified by customer (framing may vary).

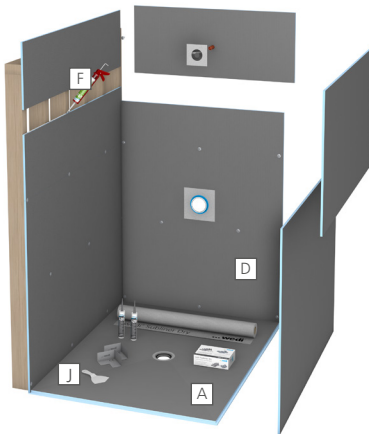

wedi Fundo Ligno Shower System – 1200 mm × 1000 mm			2.4m walls
Description	Part Number	Quantity	
A wedi Fundo Ligno, 1020 mm × 1220 mm × 20 mm, Center Drain	073732061	1 pc	
B wedi Fundo Primo and Ligno Drain Kit	US1000040	1 pc	
C wedi Fundo Drain Cover Set, Brushed Stainless Steel	US1000031	1 pc	
D wedi Building Board, 2500 × 1200 × 10 mm	010729410	2 pcs	
E wedi Fastener Kit	607023513	1 pc	
F wedi 610 Adhesive Sealant, 600 ml, 1 Sausage	076902007	3 pcs	
G wedi Tools sealing gaiter, 130 × 130 mm, pipe diameters 10 – 24 mm	095110376	1 pc	
H wedi Tools sealing gaiter, 200 × 200 mm, pipe diameters 50 – 75 mm	095110377	1 pc	
I wedi Niche 90, rectangular	074315440	1 pc	
J wedi Tools, Corner Putty Knife	US5000044	1 pc	

Materials calculated for shower walls 2.4m tall. Estimates not guaranteed and must be field verified by customer (framing may vary).

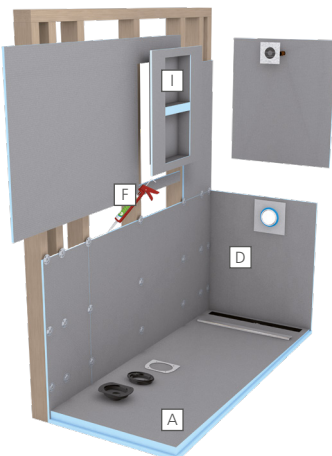

wedi Fundo Riolito neo Shower System – 1200 mm × 1000 mm			2.4m walls
Description	Part Number	Quantity	
A wedi Fundo Riolito neo, 1220 mm × 1020 mm × 50 mm, channel length: 800 mm	075100100	1 pc	
B wedi Fundo Riolito neo Drain Kit	US1000042	1 pc	
C wedi Fundo Riolito Standard drain cover, 800 mm	676800008	1 pc	
D wedi Building Board, 2500 × 1200 × 10 mm	010729410	2 pcs	
E wedi Fastener Kit	607023513	1 pc	
F wedi 610 Adhesive Sealant, 600 ml, 1 Sausage	076902007	3 pcs	
G wedi Tools sealing gaiter, 130 × 130 mm, pipe diameters 10 – 24 mm	095110376	1 pc	
H wedi Tools sealing gaiter, 200 × 200 mm, pipe diameters 50 – 75 mm	095110377	1 pc	
I wedi Niche 90, rectangular	074315440	1 pc	
J wedi Tools, Corner Putty Knife	US5000044	1 pc	

Materials calculated for shower walls 2.4m tall. Estimates not guaranteed and must be field verified by customer (framing may vary).