


INSTRUCTIONS

- 1 Spread tile adhesive on floor and/or walls/or back of tiles.
- 2 Place Clip approximately 100-ISOmm from the tile corner. For an even better finish, additional clips can be placed in the middle of the tile or where the four tiles meet.
- 3 After the clips have been placed you can then drive the wedge home through the openings using your thumb/ finger. For that extra drive you can use your palm.
- 4 Once the tile adhesive is set the clip system is ready to be removed and ready for grouting.
- 5 By kicking with the foot or a rubber mallet, hit the clip on the side and always in the same direction of the grout lines.

3 EASY STEPS

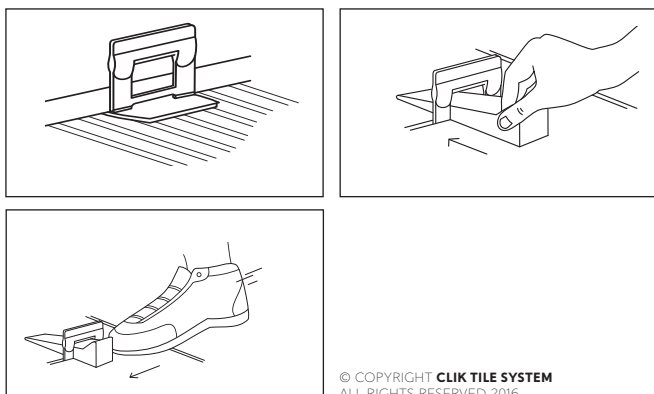

PRODUCT TECH SHEET



1.1mm



1.5mm



1.9mm



3.0mm



Suitable for stone
(14-22mm)

CLIPS 500 Pack

1.1mm

1.5mm

1.9mm

3.0mm

14-22mm STONE

Includes 4 x 500 Clip Packs per box. Total coverage for 500 Clips Pack is 45m² (600mm x 600mm tile) or 17m² (600mm x 300mm tile).

CLIPS 2000 Bulk Box

1.1mm

1.5mm

1.9mm

3.0mm

14-22mm STONE

Total coverage for 2000 Bulk Box is 180m² (600mm x 600mm tile) or 68m² (600mm x 300mm tile).

WEDGES 250 Pack

250 BAG

Includes 4 x 250 Wedge Packs per box.

WEDGES 500 Bucket

500 BUCKET

Total coverage for 500 Wedge Bucket is 45m² (600mm x 600mm tile) or 17m² (600mm x 300mm tile).

CONSUMPTION CALULATOR

