


Drain Installation Guide

Where connections form the primary connection to the drainage system, a WaterMark™ approved puddle flange <u>must</u> be used.

The installation guide shown below is a practical reference to installers only - please consult your local authority for full details as they relate to your specific circumstances. If in doubt call a qualified plumber.

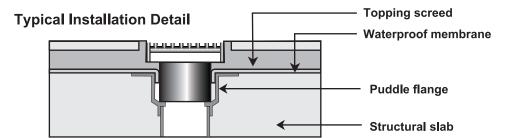

Waterproof the shower, wall and the floor including the puddle flange

- 1. Use flexible sealant at corner joints
- 2. Use approved sealant to glue the outlet
- 3. Use PVC pipe connector to sewer
- 4. Use clear bathroom silicone to join the drainage end caps
- 5. Always use waterproof membrane under the top screed
- 6. Make sure the fall is always towards the grate





DISTRIBUTED BY: DTA (AUSTRALIA) PTY LTD ABN 26 007 291 054 P.O. BOX 318 PATTERSON LAKES VIC 3197

MADE IN CHINA

This product is guaranteed from defects in material and workmanship for a twelve(12)month period, effective and evidenced from date of original invoice or delivery note. Defects caused by unauthorised/improper handling, installation and/or fitting are excluded from this guarantee.

In the event of a product fault within the guarantee period, please return the product in <u>original packaging</u> to your nearest dealer.

Your statutory rights in respect of defective products remain unaffected by the warranty.